

# Replace Rubber Sleeve

**Warning - Install the screws so that the head of the screw just touches the Top Plate. Overtightening will crack the Top**

## 1.) Remove the Top

Remove the 6 screws and carefully remove the top plate. Remove by hand rather than prying with a screwdriver.



## 2.) Remove the old Rubber Sleeve



## 3.) Install the new Rubber Sleeve

Line up the holes of the Top Plate with the holes of the new Rubber Sleeve.

Insert both the rubber sleeve and the TopPlate together into the Valve Assembly.

Make sure the Top Plate is flush with the Valve Assembly and all the holes are lined up before inserting the screws.

