

HOW TO REPLACE HS5000 LOCKING SLEEVE

Remove hose from the valve.

Remove valve from wall; disconnect low voltage wires (secure wires so they don't get lost in wall).

Start with door open & hose lock in *unlocked* position.

Step 1 > Remove switch: depress tabs & push switch through to the front of the valve.


Remove switch



Step 2 > Remove 4 sets of screws & nuts that hold together bend tube and chamber.

Pull bend tube and chamber apart gently. (Do not wipe away any silicone lubricant)

Separate bend tube from chamber

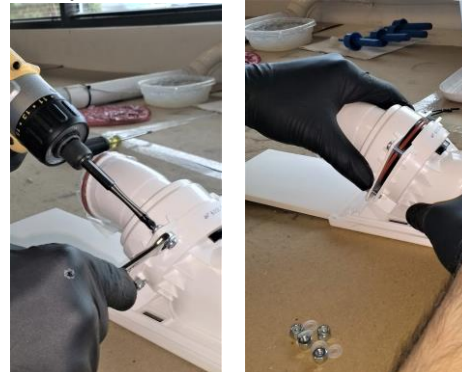

Step 3 > Remove defective locking sleeve and install new locking sleeve (large end of sleeve installed toward bend tube).

Replace locking sleeve



Step 4 > Re-assemble valve.
Tighten only until snug.

** Make sure nylon washers are between screw head & plastic frame and between nut & plastic frame.*

**Make sure switch is installed with I toward lock.*

